

HV adapters

Plug and measure – all probe types



HV-Battery



Climate I/U Probe




Climate I/U Probe





I/U Probe



Charging station I/U Probe

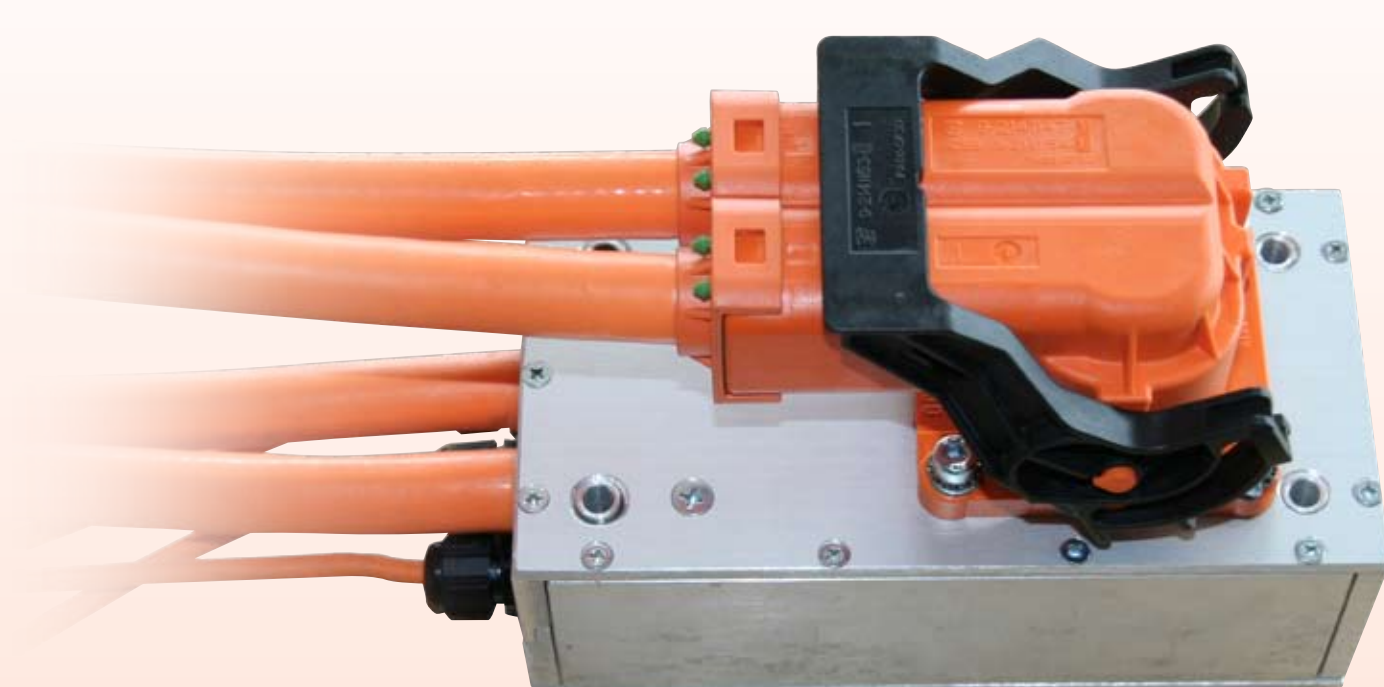

2 pole I/U Probe

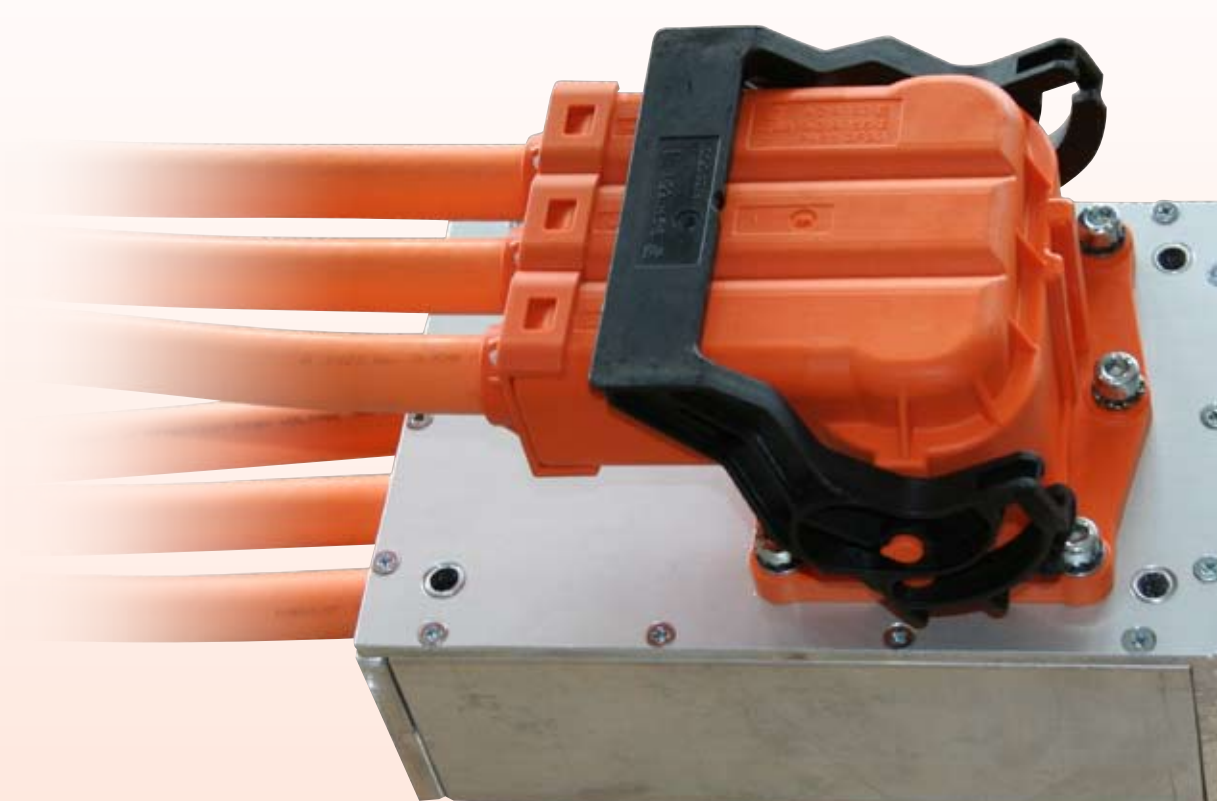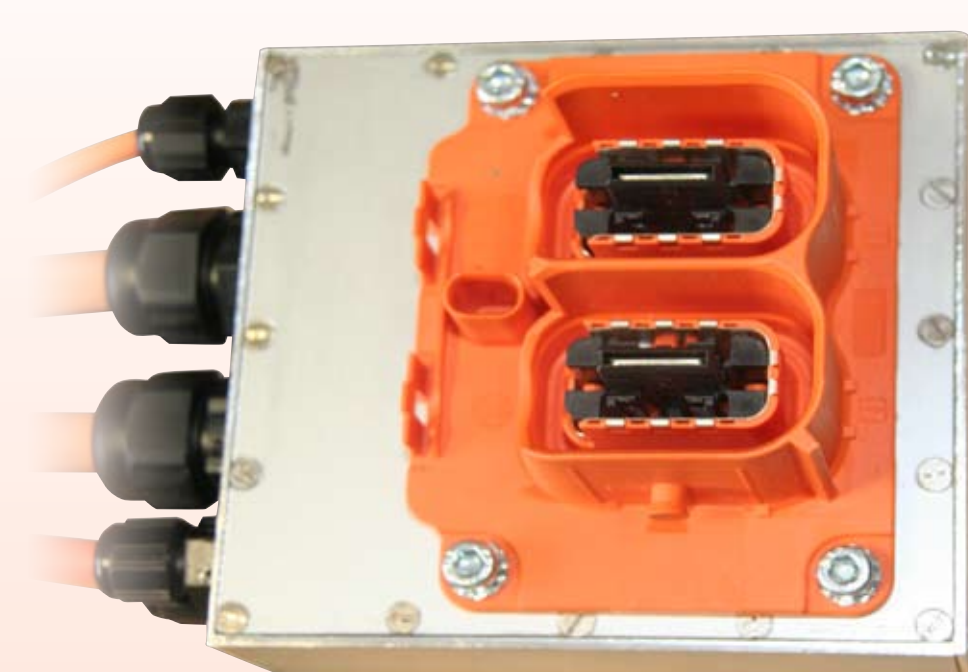

3 pole I/U Probe

